

VEHICLE	
Mode	ROAD
Shift Light	9000
AQS down	OFF
Headlamp mode	auto
Calibration	
Emergency brake	ON

02\_63



02\_64



02\_112

### 1.3) AQS Down

This function may be used to enable or disable the automatic matching system allowing downshifts without using the clutch.

Press MODE RIGHT briefly to highlight the function in red, and then press MODE UP or MODE DOWN briefly to modify the status (enabled/disabled).

Press MODE RIGHT again to confirm the selection. Once confirmed, the newly selected setting is highlighted in green.

Press MODE SET briefly to go back to the main MENU.

#### AQS ICON KEY:

- Black icon (day mode)/White icon (nigh mode) = AQS enabled
- Grey icon = AQS disabled by user
- Orange icon = AQS disabled by system
- Red icon = AQS system malfunction

### Aprilia Quick Shift

It is a system that allows go up and down the gears without having to use the clutch and without changing the position of the throttle grip.

It uses the gear shift sensor signal on the gear lever to shift gears more quickly with a lower decrease in rpm than a traditional gear shift as regards upshifting.

The system is only active above an engine speed: of approximately 3,000 rpm.

#### CAUTION

**THE CLUTCH MUST BE USED FOR UPSHIFTS AT ENGINE SPEEDS BELOW 3,000 RPM.**

#### CAUTION

**THE SYSTEM IS ACTIVE WHEN SHIFTING UP ONLY WITH THE THROTTLE OPEN.**

It can operate when downshifting as long as all the required conditions are met, including an rpm less than the maximum threshold, which varies according to the gear. If the downshifting system is not available temporarily for some reason (e.g. RPM too high, first gear engaged), the instrument panel icon will be orange.