

Side fairings

The following operations refer to one side of the vehicle, but are valid for both sides.

- To remove the side fairings, start disassembly from the inside of the dashboard by removing the three screws (1) fastening the internal cover.




- Remove the internal cover (2).



- Remove the two internal screws (3).



- Remove the two clips (4).

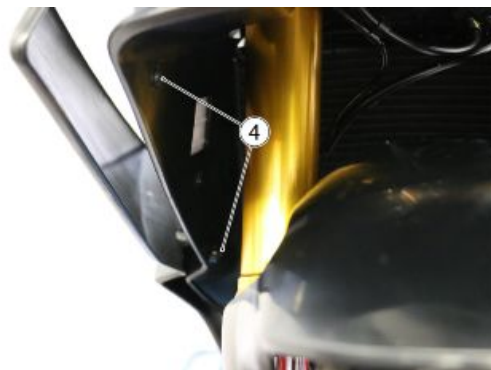

- Remove the screw (5) present under the headlight unit.



- Remove the four outer screws (6) from the side fairing.



- Remove the complete side fairing (7).

