

## Maintenance chart

### ROUTINE MAINTENANCE TABLE

I: INSPECT AND CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY

C: CLEAN, R: REPLACE, A: ADJUST, L: LUBRICATE

\* Check level every 3,000 km

\*\* Replace every 2 years

km x 1,000	1	6	12	18	24	30	36	42	48	54	60
Driven pulley roller casing			L		L		L		L		L
Safety fasteners	I		I		I		I		I		I
Spark plug		I	R	I	R	I	R	I	R	I	R
driving belt		I	R	I	R	I	R	I	R	I	R
Throttle control	A		A		A		A		A		A
Air filter		C	C	C	C	C	C	C	C	C	C
SAS filter			C		C		C		C		C
Oil mesh filter	C	C	C	C	C	C	C	C	C	C	C
Engine oil filter	R	R	R	R	R	R	R	R	R	R	R
Valve clearance		A		A			A			A	
Electrical system and battery	I	I	I	I	I	I	I	I	I	I	I
Cooling system					C				C		
Brake levers	L		L		L		L		L		L
Brake fluid **	I	I	I	I	I	I	I	I	I	I	I
Engine oil*	R	R	R	R	R	R	R	R	R	R	R
Hub oil	R	I	I	I	R	I	I	I	R	I	I
Headlight direction adjustment			A		A		A		A		A
Brake pads	I	I	I	I	I	I	I	I	I	I	I
Sliding shoes / CVT rollers			R		R		R		R		R
Tyre pressure and wear	I	I	I	I	I	I	I	I	I	I	I
Vehicle road test	I	I	I	I	I	I	I	I	I	I	I
Idle speed	A		A		A		A		A		A
Odometer gear			L		L		L		L		L
Suspension			I		I		I		I		I
Steering	I		I		I		I		I		I
Transmission			L		L		L		L		L

## Carburettor

Check idle speed according to the indications in the maintenance table. To reach the set screw:


- Remove the inspection cover from the inside of the helmet compartment.

### CAUTION



BEFORE CARRYING OUT THE FOLLOWING OPERATIONS AND IN ORDER TO AVOID BURNS, LEAVE ENGINE AND MUFFLER TO COOL OFF TO AMBIENT TEMPERATURE.

- Operate on the screw «1» until the pre-set idle speed is obtained.

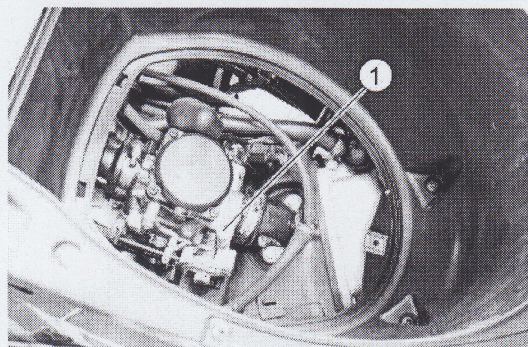

## Characteristic

### Engine revs at idle speed

1,700 ± 100 rpm