

## USA-CANADA VERSION

### SCHEDULED MAINTENANCE TABLE

I: CHECK AND CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY.

C: CLEAN, R: REPLACE, A: ADJUST, L: LUBRICATE

\* Perform maintenance more frequently when riding in unusually humid or dusty areas

\*\* In any case, check the level every time the scooter is used

\*\*\* Perform maintenance more frequently when riding mainly with the throttle wide open

\*\*\*\* Replace every 2 years

mi (km) x 1,000	1 (0.62)	10 (6.21)	20 (12.42)	30 (18.64)	40 (24.85)	50 (31.07)	60 (37.28)
Safety fasteners	I	I	I	I	I	I	I
Spark plug		R	R	R	R	R	R
Centre stand	L	L	L	L	L	L	L
Drive belt			R		R		R
Throttle control	I	I	I	I	I	I	I
Rollers housing / Rollers contrast			C/I		C/I		C/I
Diagnosis by tool	I	I	I	I	I	I	I
Air filter (*)		R	R	R	R	R	R
Engine oil filter	R	R	R	R	R	R	R
Belt compartment filter (*)		C	C	C	C	C	C
Valve clearance							
Electrical system and battery	I	I	I	I	I	I	I
Braking system	I	I	I	I	I	I	I
Coolant (****)	I	I	I	I	I	I	I
Brake fluid (****)	I	I	I	I	I	I	I
Engine oil (**)	R	R	R	R	R	R	R
Hub oil	R						
Headlight direction adjustment	I	I	I	I	I	I	I
Brake pads			I	I			I
Sliding block and variable speed rollers			R		R		R
Tyre pressure and wear	I	I	I	I	I	I	I
Vehicle road test	I	I	I	I	I	I	I
Base bleeding (***)			C		C		C
Suspension	I	I	I	I	I	I	I
Steering	A	I	I	I	I	I	I
Labour time (minutes)	80	80	210	80	240	80	210

N.B.

AT EACH SCHEDULED MAINTENANCE MUST BE VERIFIED WITH THE DIAGNOSTIC TOOL IF THERE ARE ERRORS AND THE IF THE PARAMETERS ARE CORRECT.  
ENSURE THAT THE VEHICLE CALIBRATION IS UP TO DATE AFTER UPDATING THE DIAGNOSTIC TOOL.

CAUTION

AFTER THE PROVIDED MAINTENANCE PROGRAM IS INDICATED TO PROCEED WITH THE MAINTENANCE OF THE VEHICLE STARTING FROM THE SERVICE OF 5,000 Km (3,106 mi) OR 5 MONTHS.