

Maintenance chart

FOR EUROPE VERSION

SCHEDULED MAINTENANCE TABLE

I: CHECK AND CLEAN, ADJUST, LUBRICATE OR REPLACE, IF NECESSARY C: CLEAN; R: REPLACE; A: ADJUST; L: LUBRICATE

* Check level every 2,500 km

km x 1,000 (mi x 1,000)	1 (0.6)	5 (3.1)	10 (6.2)	15 (9.3)	20 (12.4)	25 (15.5)	30 (18.6)	EVERY 12 MONTH S	EVERY 24 MONTH S
Safety blocks	I		I		I		I		
Spark plug			I		R		I		
Centre stand			I		I		I	L	L
Drive belt			R		R		R		
Throttle control	I		I		I		I	I	I
Rollers housing			I		I		I		
Diagnosis by tool	I	I	I	I	I	I	I	I	I
Air filter			R		R		R		
Engine oil filter	R		R		R		R	R	R
Valve clearance	A		A		A		A		
Clutch assembly					I				
Electrical system and battery	I	I	I	I	I	I	I		
Braking system	I		I		I		I	I	I
Cylinder cooling system						I		I	I
Brake Fluid	I	I	I	I	I	I	I	I	R
Engine oil*	R	I	R	I	R	I	R	R	R
Hub oil			I		I		I	I	I
Headlight direction adjustment			I		I		I		
Brake pads		I	I	I	I	I	I	I	I
Sliding shoes / CVT rollers			I		R		I		
Engine oil pre-filter	C		C		C		C		
Tire pressure and wear	I	I	I	I	I	I	I	I	I
Vehicle road test	I		I		I		I	I	I
Driven pulley - roller casings			I		L		I		
Suspensions			I		I		I	I	I
Steering	I		I		I		I	I	I
Front wheel bearing seal ring			L		L		L		
Pin_Rear drum brake set screw			L		L		L		
Transmission			L		L		L	I	I
Labour time (minutes)	50	30	140	30	140	30	140	60	60