



06_01

Scheduled servicing table (06_01)

Adequate maintenance is fundamental to ensure long-lasting, optimum operation and performance of your vehicle.

For this reason a series of checks and maintenance services has been prepared, available for purchase separately, listed together in the chart on the following page. It is a good idea to report small performance anomalies right away to an **Authorised Service Centre**, without waiting for the next scheduled service, so they can be repaired immediately.

It is necessary to have your vehicle serviced to the prescribed intervals of time, even if you have not reached the predicted mileage. Services must be performed punctually at the correct intervals to maintain the validity of the warranty. For any additional information concerning Warranty procedures and 'Scheduled Maintenance', please consult the 'Warranty Conditions'.

SCHEDULED MAINTENANCE TABLE

km x 1,000	1	5	10	15	20	25	30	EVERY 12 MONTHS	EVERY 24 MONTHS
Safety fasteners	I		I		I		I		
Spark plug			I		R		I		
Centre stand		L	L	L	L	L	L	L	L
Drive belt			R		R		R		
Throttle control	I		I		I		I	I	I
Rollers housing			I		I		I		
Diagnosis by tool	I	I	I	I	I	I	I	I	I

km x 1,000	1	5	10	15	20	25	30	EVERY 12 MONTHS	EVERY 24 MONTHS
Air filter			R		R		R		
Engine oil filter	R		R		R		R	R	R
Valve clearance	A		A		A		A		
Clutch assembly					I				
Electrical system and battery	I	I	I	I	I	I	I		
Braking system	I		I		I		I	I	I
Cylinder cooling system						I		I	I
Brake fluid	I	I	I	I	I	I	I	I	R
Engine oil*	R	I	R	I	R	I	R	R	R
Hub oil			I		I		I	I	I
Headlight direction adjustment			I		I		I		
Brake pads	I	I	I	I	I	I	I	I	I
Sliding shoes / CVT rollers			I		R		I		
Engine oil pre-filter	C		C		C		C		
Tyre pressure and wear	I	I	I	I	I	I	I	I	I
Vehicle road test	I	I	I	I	I	I	I	I	I
Driven pulley - roller casings			I		L		I		
Suspensions			I		I		I	I	I
Steering	A		A		A		A	I	I

km x 1,000	1	5	10	15	20	25	30	EVERY 12 MONTHS	EVERY 24 MONTHS
Transmission			L		L		L	I	I

I: CHECK AND CLEAN, ADJUST, LUBRICATE OR REPLACE, IF NECESSARY C: CLEAN; R: REPLACE; A: ADJUST; L: LUBRICATE

* Check level every 2,500 km