



Headlight assy.

HEADLIGHT


- Using special tools remove the headlamp from the housing on the mudguard.

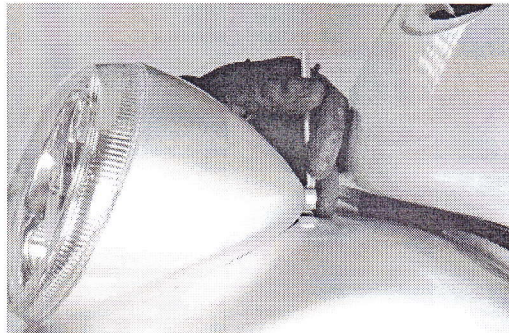


- Disconnect the daylight running light connector.

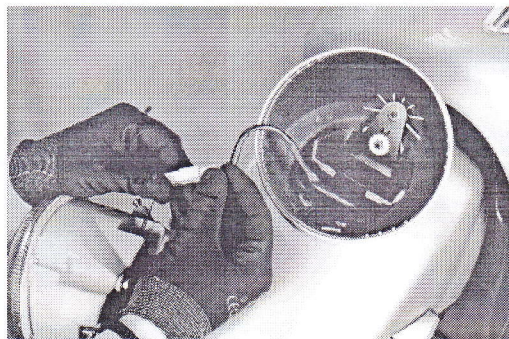


- Disconnect the low beam/high beam light connector.

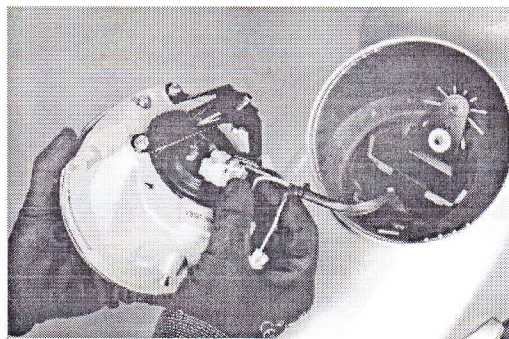


- To remove the daylight running light, slide off the bulb support from its seat and remove the bulb from the support.

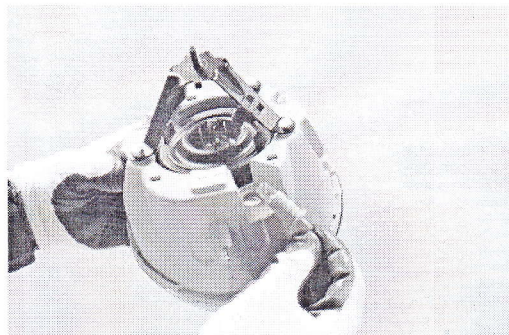

- To remove the low beam/high beam light, remove the headlamp protection gasket.

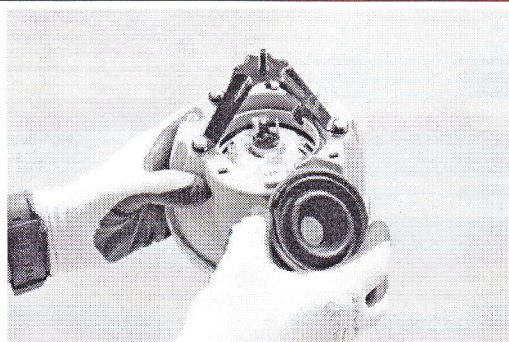

- Remove by turning the low beam/high beam light bulb support.

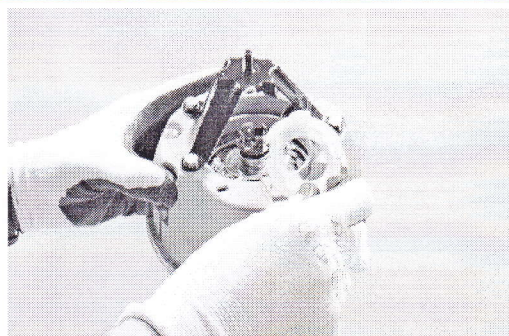

- Remove the bulb from the support.

