





NUMBER 003, OCTOBER 2001

Programming ET4 immobilizer system

We have had a few questions lately on how to properly program keys for the ET4. Review the instructions and pictures below to help you program new keys. The red key opens and closes the circuit. All of the un-programmed blue keys should be introduced in between the red keys. You can program up to seven blue keys.

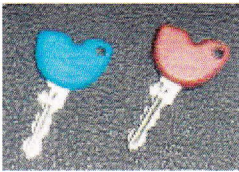

1. Separate the keys and remove all key chains.

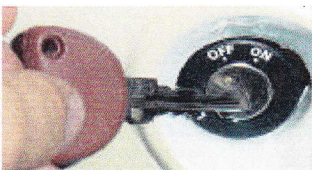

2. Put the red key in the ignition.




3. Turn the key to the "on" position.




4. Turn the key "Off" when the LED comes on.



5. Remove the red key.

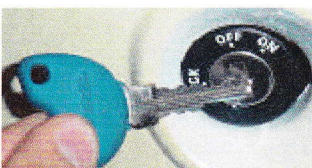

6. Place the blue key in the ignition within 6 seconds.

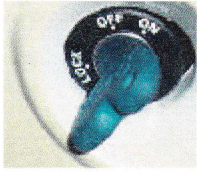


7. Turn the key to the "On" position.



8. Turn the key "Off" when the LED comes on.



9. Remove the blue key.
(Repeat steps 6-9 for additional blue keys)

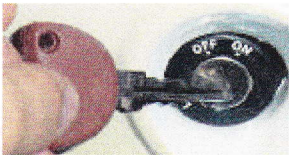

10. Put the red key in the ignition within 6 seconds.



11. Turn the key to the "On" position.



12. Turn the key "Off" before the LED comes on.



13. Remove the red key to close the circuit.