



Saddle release programming

Zeroing

- Remove the left side fairing to access the saddle opening receiver control unit indicated in the photograph
- Remove the metal terminal and connect it to a good earth point, or to terminal 7 (black), for at least 10 seconds.
- In this operation all the remote controls stored in the control unit will be deleted.

WARNING

THE CONTROL UNIT CAN PROGRAMME UP TO 8 REMOTE CONTROLS.

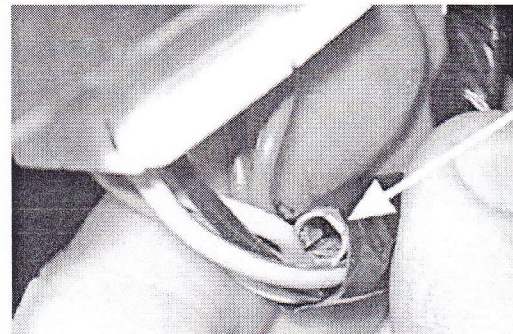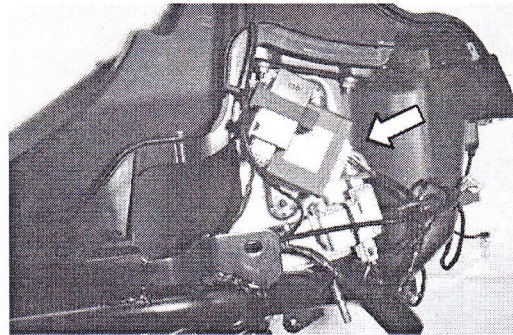

Programming

Follow these steps to program the remote controls:

1. Insert the remote control key to be programmed in the steering lock key block.
2. Turn the key to the «ON» position, press the button on the remote control, release the button, turn the key back to the «OFF» position from the «ON» position, all within four seconds.
3. Wait from 1 to 8 seconds.
4. Repeat steps 2 and 3 for 4 times without removing the key.

The control unit confirms the programming has been successfully executed by opening the saddle.



TO STORE THE OTHER REMOTE CONTROLS TO MEMORY, (MAXIMUM 8), YOU NEED TO REPEAT THE WHOLE PROCEDURE AGAIN. FAILURE TO CARRY OUT THESE OPERATIONS WITHIN THE INDICATED TIMES WILL RESULT IN THE AUTOMATIC CANCELLATION OF THE PROCESS FOR PROGRAMMING THE REMOTE-CONTROLLED KEYS.

WARNING

AVOID PRESSING THE REMOTE CONTROL BUTTON MORE THAN ONCE WHEN FAR AWAY FROM THE SCOOTER. THE SYNCHRONISM BETWEEN THE REMOTE CONTROL AND THE RECEIVER CAN BE IMPAIRED. SHOULD THIS BE THE CASE, REPEAT THE PROGRAMMING PROCEDURE. DO NOT KEEP THE REMOTE CONTROL IN PLACES WITH TEMPERATURES EXCEEDING 60° C THE BATTERY WILL RUN