Maintenance Eldorado

Maintenance chart

NOTE

CARRY OUT MAINTENANCE OPERATIONS AT HALF THE INTERVALS SPECIFIED IF THE VEHICLE IS USED IN PARTICULAR RAINY OR DUSTY CONDITIONS, OFF ROAD OR FOR TRACK USE.

NOTE

THE TIMES LISTED ON THE SCHEDULED MAINTENANCE TABLE INCLUDE TIME DEDICATED TO MANAGEMENT ACTIVITIES.

Routine maintenance table

I: INSPECT AND CLEAN, ADJUST, LUBRICATE OR REPLACE IF NECESSARY

C: CLEAN, R: REPLACE, A: ADJUST, L: LUBRICATE

- (1) Check and clean and adjust or replace, if necessary, before every journey.
- (2) Replace every 2 years or 20000 Km (12427 mi).
- (3) Replace every 4 years.
- (4) Check at each engine start.
- (5) Periodic lubrication of the stand with spray grease is recommended after particularly hard use (dirt from salt, dust, etc.) or after long periods of inactivity.
- (6) Lubricate if you are riding in the rain, on wet roads or after the vehicle has been washed.
- (7) Replace at whichever of the following occurs first: 40000 km (24854 mi) or 48 months

ROUTINE MAINTENANCE TABLE

km x 1,000	1.5	10	20	30	40	50	60	70	80
Exhaust pipe flange bolts	1		1		1		- 1		1
Spark plugs		1	R	- 1	R	1	R	- 1	R
Stand (5)		1	1	1	I	1	1	ı	1
Control cables and controls (4)	1	- 1	1	1	1	1	- 1	- 1	1
Alternator belt						R			
Steering bearings and steering clearance	1	1	1	1	1	1	- 1	- 1	- 1
Wheel bearings		- 1	1	1	-1	1	1	1	- 1
Brake discs	1			1	1	- 1	- 1	- 1	10
Air filter		R	R	R	R	R	R	R	R
Engine oil filter	R	R	R	R	R	R	R	R	R
Vehicle general operation	1			1	- 1	- 1	1	1	- 1
Braking systems		1	- 1	- 1	1,5	- 1	- 1	1	1
Light circuit	1	1	1	1	1	- 1	- 1	1	1
Safety switches	1		1		1		- 1		
Brake fluid (2)	1	- 1	R	1	R	1	R	1	R
Clutch fluid (2)	1	1	1	1	- 1	1	- 1	1	1
Gearbox oil	R		R	R	R	R	R	R	R
Fork oil (7)					R				R
Engine oil	R	R	R	R	R	R	R	R	R
Final drive oil						R			
Clutch lever pin (6)	L	L	L	L	L	L	L	L	L
Tyres - pressure / wear (1)	1	1	1	- 1	1	- 1	1	1	1
Valve clearance adjustment	A	Α	Α	Α	Α	Α	Α	Α	Α
Wheels		1	1	1	1	1	1		1
Bolts and nuts tightening	1	1	1	- 1	1	1	1	1	1
Battery terminals tightening			1		1				1
Suspension	1		1		1		1		1
Filter box drainage tube		1	1	1	1	1	1	1	1
Fuel lines (3)		1		1		1		1	1
Brake lines (3)		I		1	1		ı	1	1
Brake pad wear (1)		1	1	1	1	1		1	1