

RSV4 and TUONO V4 E5 BASE AND SEAT COVER ASSEMBLY INSTRUCTIONS


Make sure you have the spare parts listed in the table in the margin of this page available.

After removing the seat cover cushion (black) and separating the base (blue) from the seat cover (red) taking care to completely remove the old double-sided adhesive tape, clean the internal surfaces of the two shells with products that do not leave residues (NO Ethyl Alcohol), in correspondence with the areas where the new double-sided adhesive tape will be applied. Photo 1 and 2.

Apply the double-sided adhesive contained in the kit on the lower shell as in photo 3, remaining within the box marked on the piece and taking care not to contaminate the double-sided adhesive tape with your fingers or anything else.

Do not remove the outer film of the double-sided adhesive tape.


After application, apply pressure with your fingers to promote adhesion.

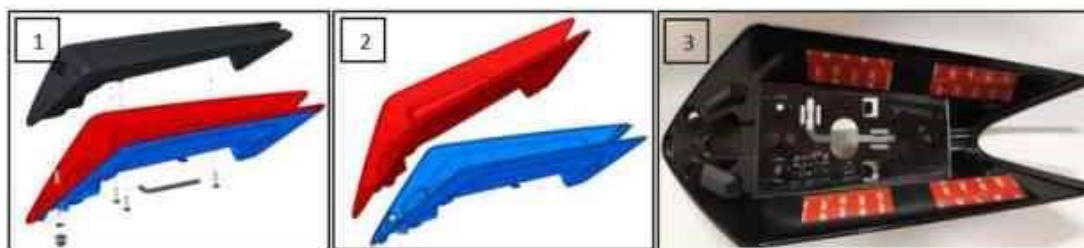

Remove the external protective film of the double-sided adhesive tape and assemble the two components, firstly joining the front part (1) and then folding them together (2). Photo 4.

After assembly, apply pressure with your fingers on the entire surface to facilitate the adhesion of the double-sided tape (3).

Position the spacer supplied in the kit on the rear fixing socket of the cushion as in the photo below.

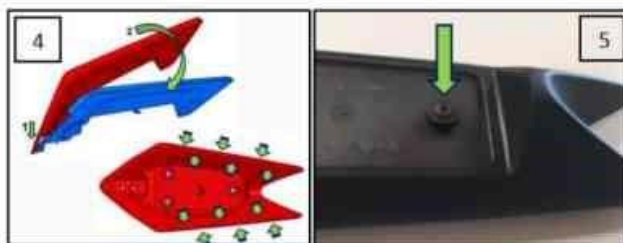

Reassemble the seat starting from the pin and then fixing the cushion with the 3 screws contained in the kit. Photo 6.



Ricambi necessari/Spare parts needed		
Description	Code	Q.ty
Distanziale/Spacer	AP9100174	1
Viti/Screws	CM178606	3
Biadesivo/Biadhhesive	2B008842	4