

Replacement

CAUTION

THE UNIT MUST BE HOT WHEN THE OIL IS CHANGED AS UNDER SUCH CONDITIONS OIL IS FLUID AND THEREFORE EASY TO DRAIN.

NOTE

RIDE SOME km (miles) TO WARM UP ENGINE OIL

- Place a recipient with a capacity of at least 400 cc (25 cu.in) under the drain plug (2).
- Unscrew and remove the drainage plug (2).
- Unscrew and remove the filler plug (1).
- Drain the oil into the container for at least 5 minutes for oil to drain out completely.
- Replace the sealing washer of the discharge plug (2).
- Remove any metal scrap attached to the drainage plug (2) magnet.
- Screw and tighten the drainage plug (2).
- Fill with new oil via the inlet hole.
- Quantity 160 cc MAX (9.76 cu in) (filling amount after emptying; - 20 cc (1.22 cu in) compared to the nominal amount of 180 cc (10.98 cu in), to compensate for the oil residue remaining in the gear-case).



CAUTION

DO NOT ADD ADDITIVES OR OTHER SUBSTANCES TO THE FLUID. WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.

NOTE

THE RECOMMENDED QUANTITY OF OIL FOR REPLACEMENT IS 160 cc (9.76 cu in)

Recommended products

75W-140 lubricant for gearboxes and transmissions Synthetic lubricant for gearboxes and transmissions

SAE 75W-140 - API GL5

- Screw and tighten the cap (1).

NOTE

WHILE REFITTING, USE A NEW SEAL WASHER.

CAUTION**IF IT IS NECESSARY TO INSTALL A NEW TRANSMISSION GEARBOX, PAY SPECIAL ATTENTION TO THE PROCEDURE BELOW**

Since they are already run-in at the factory, the complete transmission boxes coming from the Spare parts department contain a minimum residual oil quantity and therefore after installing them on the vehicle, the following procedure must be performed:

- Open the filler plug and drain any residual oil from the lower drain plug leaving it to drip for at least 5 minutes.
- Refit and tighten the lower drain plug and refill through the filler plug with 160 cu cm (9.76 cu in) of oil.
- Refit and tighten the filler plug.
- Assemble the breather plug. If the gearbox arrived with the breather plug already assembled, remove it and blow it with compressed air to carefully remove any oil residues.

CAUTION

WHILE REFITTING, USE A NEW SEAL WASHER FOR THE BREATHER CAP.

Engine oil

Check

Check the engine oil level frequently.

NOTE

HALVE THE SERVICE INTERVALS INDICATED IF THE VEHICLE IS USED IN PARTICULARLY RAINY OR DUSTY CONDITIONS, ON POOR ROADS OR FOR HIGH PERFORMANCE RIDING.



THE OIL LEVEL MUST BE CHECKED WHEN THE ENGINE IS WARM.

CAUTION

DO NOT LET THE ENGINE IDLE WITH THE VEHICLE AT A STANDSTILL TO WARM UP THE ENGINE AND OBTAIN THE OPERATING TEMPERATURE OF ENGINE OIL. PREFERABLY CHECK THE OIL AFTER A JOURNEY OF AFTER TRAVELLING APPROXIMATELY 15 Km (10 miles) IN EXTRA-URBAN CONDITIONS (ENOUGH TO WARM UP THE ENGINE OIL TO OPERATING TEMPERATURE).

- Shut off the engine.
- Keep the vehicle upright with both wheels on the earth.
- Using the relative opening on the engine casing, check the oil level.

MAX (top notch) = maximum level.

MIN (bottom notch) = minimum level

- The level is correct if it reaches the "MAX" level.



Replacement

NOTE

HOT OIL IS MORE FLUID AND WILL DRAIN OUT MORE EASILY AND COMPLETELY.

- Posizionare un contenitore con capacità di raccolta adeguata in corrispondenza del tappo di scarico (1)
- Svitare e togliere il tappo di scarico (1)

**NOTE**

WHILE REFITTING, USE A NEW SEAL WASHER.

- Unscrew and remove the filler plug (2)
- Drain the oil into the container; allow several minutes for oil to drain out completely.
- Check and if necessary, replace the sealing washer of drainage plug (1).
- Remove any metal deposits attached to the drainage plug (1) magnet.
- Screw and tighten the drainage plug (1).

**CAUTION**

CHECK THE O-RING PRESENT ON THE FILLING CAP AND REPLACE IF DAMAGED.



**DO NOT DISPOSE OF OIL INTO THE ENVIRONMENT.
DISPOSE OF ENGINE OIL IN A SEALED CONTAINER AND TAKE IT TO YOUR SUPPLIER OR TO THE NEAREST USED OIL COLLECTION CENTRE.**

Engine oil filter

- Undo the two screws (1) and remove the cover (2)
- Remove the engine oil filter (3)
- Spread a thin layer of oil on the sealing ring of the new engine oil filter
- Fit the new engine oil filter with the spring facing downwards
- Refit the cover (2), screw and tighten the screw (1)



NOTE

NEVER REUSE AN OLD FILTER.

NOTE

WHILE REFITTING, USE A NEW SEAL WASHER.

NOTE

WHILE REFITTING, USE A NEW SEAL O-RING.

Gearbox Oil

Replacement

NOTE

HOT OIL IS MORE FLUID AND WILL DRAIN OUT MORE EASILY AND COMPLETELY.

- Place a container with suitable capacity under the drainage plug (2).
- Unscrew and remove the drainage plug (2).



- Unscrew and remove the filler plug (1).
- Drain the oil into the container; allow several minutes for oil to drain out completely.
- Check and if necessary, replace the sealing washers of drainage plug (2).
- Remove any metal scrap attached to the drainage plug (2) magnet.



- Remove the air filter (3) and clean it
- Check the O-Ring (4) and if necessary replace it
- Screw and tighten the drainage plug (2)




- Pour in new oil, observing the quantity indicated in the table "capacity"
- Tighten the filler cap (1).

CAUTION

DO NOT ADD ADDITIVES OR OTHER SUBSTANCES TO THE FLUID. WHEN USING A FUNNEL OR ANY OTHER ELEMENT, MAKE SURE IT IS PERFECTLY CLEAN.

Air filter

- Remove the saddle
- Unhook the connector from the air-box cover

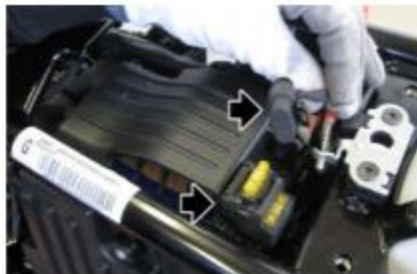

- Remove the air-box cover fixing screw

